

NOOK SIMPLE TOUCH

Power Button

Press and hold the power button on the back of your NOOK for about 2 seconds to turn your NOOK on or off.



microSD™ Memory Card Slot

On the right side of your NOOK, lift the rubber flap to insert a microSD memory card* for storing your personal files.

Page Turn Buttons

Turn forward one page or scroll up a list.

Turn back one page or scroll down on a list.

Touchscreen E Ink® Pearl Display

Your NOOK features a full touchscreen to turn pages with just a tap or swipe and for easy navigation.

Quick Nav Button

This  NOOK symbol on the bottom face of the device is a button. Press it to wake up your device from sleep mode (turn the display on). When the device is on, press the Quick Nav Button to view the Quick Nav Bar.

*microSD memory card not included.

QUICK NAV BAR

(Appears when you press the Nook symbol on the front of device)



HOME: Screen shows books/periodicals most recently read or purchased

LIBRARY: Books/periodicals you have purchased or borrowed

SHOP: Connects you to Barnes and Noble site

SEARCH: Allows you to search both your library and the Shop

SETTINGS: Configuration options

STATUS BAR (top of screen)



Left side:


- Nook symbol appears when software updates are installed
- Open book icon returns you to most recently read item
- Envelope icon indicates notifications

Right side:

- Wireless connection indicator
- Battery charge indicator
- Current time

READING TOOLS

(To open, tap anywhere in the center of the screen)

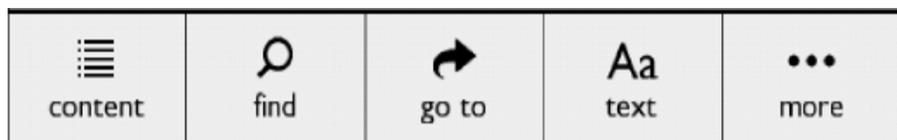


CONTENT: Opens the table of contents for the book

FIND: Lets you search the book you are reading

GO TO: Lets you skip forward or backward to a specific page

TEXT: Lets you adjust font size, line spacing and other attributes

MORE: Opens a page with details about the book and tools for sharing, archiving and more

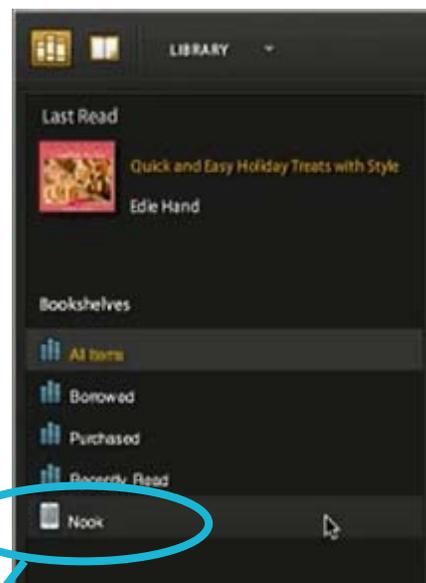

REMOVING BOOKS FROM YOUR NOOK:

In order to delete the book from your device, you must connect your Nook to the computer with the USB cable. Your device will appear to the left at the bottom of the Bookshelves in Adobe Digital Editions.



Click on the name of your device to open that library. Hover over the cover image and an arrow will appear in the top left corner.

This opens a menu which allows you to Return a Borrowed Item or Delete an expired title. Click on the appropriate option and respond to the prompt.

You will need to repeat the process to remove the title from the computer's Adobe Digital Editions library.

Click on the books icon in the top left corner.

Delete or Return the same title as you did above.

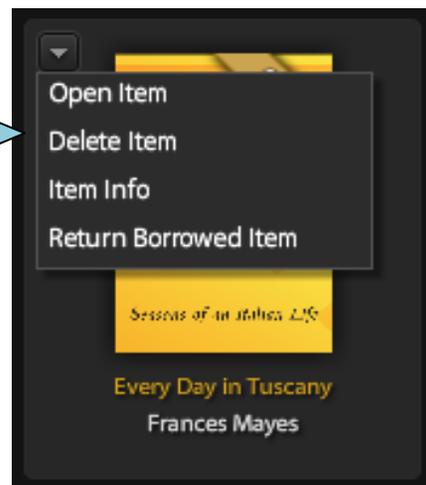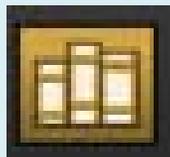

Library

In your Nook library, you will find:

- Books you have purchased from the Nook store
- Periodicals you have purchased from the Nook store
- Free books you have downloaded from the Nook store
- EPUB & PDF books you have transferred to the device via USB connection (these appear in My Files)*

****In addition, these books will appear with purchased items on the home page***