
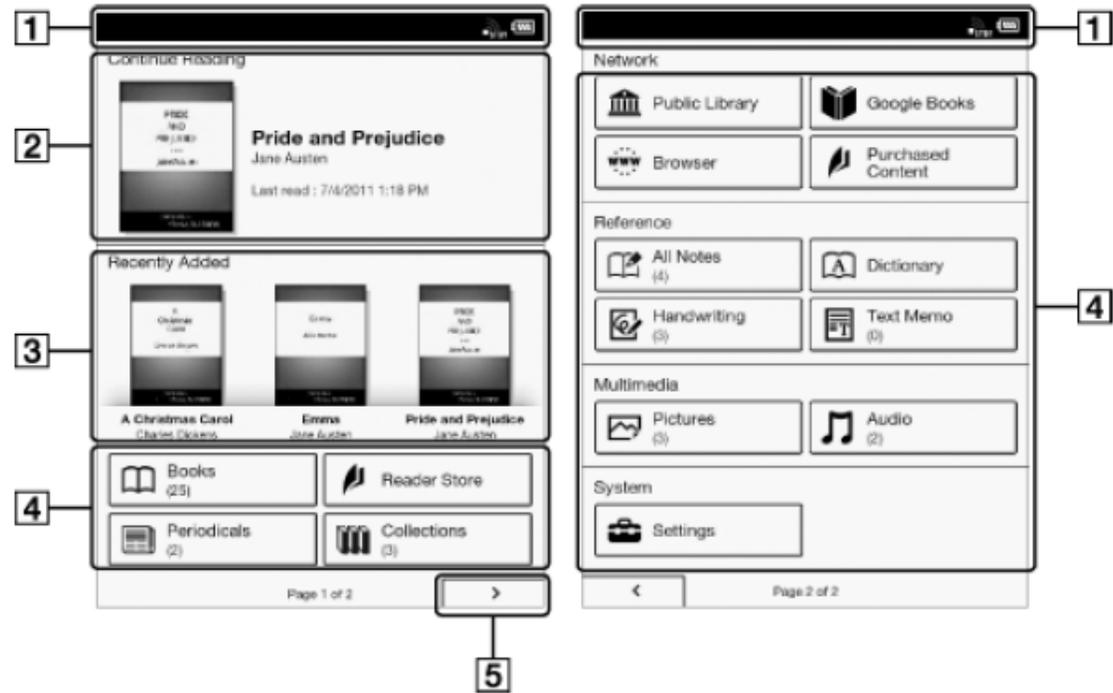


# SONY READER (PRS-T1)


## Home Screen

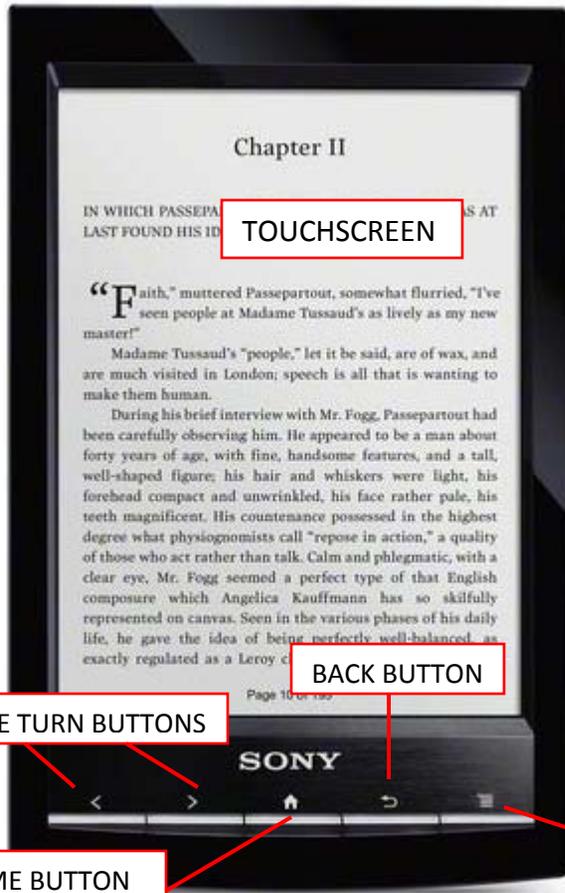

**MENU BUTTON**

Use the Menu button when reading to:

- Change orientation from portrait to landscape
- Change the font & font size

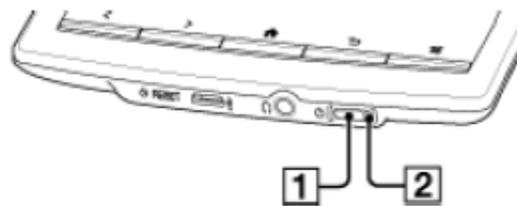

- 1** (Power) button
- 2** Charge/Busy indicator

## Borrowing books from Tacoma Public Library:

1. Make sure the device's wireless connection is turned on & you have a network connection.
2. Click the  (Home) button.
3. Go to the 2<sup>nd</sup> page of the Home screen and select 
4. You can search for a library by name, city/state or zip code.
5. Select Tacoma Public Library and it will connect to the digital collection via Overdrive.
6. Search for and checkout books using your TPL card.
7. Books are downloaded wirelessly on the device
8. Books will appear on the Home screen under Recently Added & 

## Returning books to Tacoma Public Library:

1. Make sure the device's wireless connection is turned on & you have a network connection.
2. Click the  (Home) button.
3. Tap  , Press the  (Menu) button, Tap 
4. All borrowed Library books will have a small box appear in the bottom right corner.
5. Tap the cover of the book you want to return. A check mark appears in the box of the selected book. You can select multiple titles.
6. Tap [Done] and [Yes].
7. This both returns the item to TPL and removes it from the device.

If you are having trouble downloading a title wirelessly, you can also sideload it.

Install Adobe Digital Editions (ADE) on your computer.

Connect the device to your computer. Open ADE and authorize your device.

Go to your media account on TPL's Overdrive page. Go to My Items Out and click on the Download link. When the title appears in ADE, drag and drop it to your device.

### To delete an item purchased from the Reader Store:

Tap the Home button.

Tap [Books].

Tap and hold an item. The option menu appears.

Tap [Delete] and [Yes] when prompted.